

Units 9-10 Ryehill Court, Lodge Farm Ind.Est. New Duston, Northampton NN5 7EU www.ultrasecuredirect.com Tel: 01604 589414 Fax: 01604 582090 Email: info@ultrasecuredirect.com


## Lockable Security Telescopic Post Installation Instructions

## Thank you for choosing an 'Ultra Secure' Security post.

## Please read the following:-

- 1. Select a site where you wish to place the post i.e. in front of a caravan, car, trailer, driveway, forecourt, garage door, etc.
- 2. Mark and dig out an area approximately 300mm square (slightly wider for the HD post) and 200mm deeper than your outer base sleeve.
- 3. Pour in the 20mm gravel to a depth of approx 200mm, placing your post centrally on top of the gravel making sure the top plate of the bottom sleeve is 3-5mm above ground level. Ensure post is upright.
- 4. Gently place a moist (not wet) mix down the sides tapping every 150mm until your post is fully concreted in.
- 5. Raise Post, the cam will support the weight of the inner post. Check post is level and vertical.
- 6. Finish around the post according to the surrounding area.
- 7. As the concrete is setting it is advisable to again raise the post to an upright position and recheck the post is level and vertical.
- 8. When satisfied lower the post and allow the concrete to set for 24 hours before using.

## \*\*<u>Warning! – Always be aware of mains supply</u> pipes when digging underground.\*\*

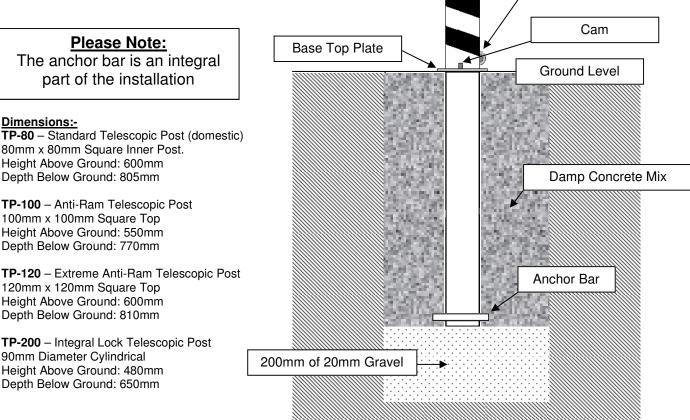

<u>Tip:</u>

Don't Lose the Keys! Have another set cut and keep them safe. We are unable to provide replacement keys if lost.

Caution!

Do not place

fingers in

Lock aperture

**Discus Lock**